

---

# A Power cord set requirements

The power supplies on some computers have external power switches. The voltage select switch feature on the computer permits it to operate from any line voltage between 100-120 or 220-240 volts AC. Power supplies on those computers that do not have external power switches are equipped with internal switches that sense the incoming voltage and automatically switch to the proper voltage.

The power cord set received with the computer meets the requirements for use in the country where you purchased the equipment.

Power cord sets for use in other countries must meet the requirements of the country where you use the computer.

## General requirements

The requirements listed below are applicable to all countries:

1. The power cord must be approved by an acceptable accredited agency responsible for evaluation in the country where the power cord set will be installed.
2. The power cord set must have a minimum current capacity of 10A (7A Japan only) and a nominal voltage rating of 125 or 250 volts AC, as required by each country's power system.
3. The diameter of the wire must be a minimum of 0.75 mm<sup>2</sup> or 18AWG, and the length of the cord must be between 1.8 m (6 feet) and 3.6 m (12 feet).

The power cord should be routed so that it is not likely to be walked on or pinched by items placed upon it or against it. Particular attention should be paid to the plug, electrical outlet, and the point where the cord exits from the product.

---

 **WARNING!** Do not operate this product with a damaged power cord set. If the power cord set is damaged in any manner, replace it immediately.

---

## Japanese power cord requirements

For use in Japan, use only the power cord received with this product.

---

 **CAUTION:** Do not use the power cord received with this product on any other products.

---

## Country-specific requirements

Additional requirements specific to a country are shown in parentheses and explained below.

Country	Accrediting Agency	Country	Accrediting Agency
Australia (1)	EANSW	Italy (1)	IMQ
Austria (1)	OVE	Japan (3)	METI
Belgium (1)	CEBC	Norway (1)	NEMKO
Canada (2)	CSA	Sweden (1)	SEMKO
Denmark (1)	DEMKO	Switzerland (1)	SEV
Finland (1)	SETI	United Kingdom (1)	BSI
France (1)	UTE	United States (2)	UL
Germany (1)	VDE		

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SVT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15A, 125V) or NEMA 6-15P (15A, 250V) configuration.
3. Appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. Flexible cord must be Type VCT or VCTF, 3-conductor, 0.75 mm<sup>2</sup> conductor size. Wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7A, 125V) configuration.

## B Statement of memory volatility

The purpose of this chapter is to provide general information regarding nonvolatile memory in HP Business computers. This chapter also provides general instructions for restoring nonvolatile memory that can contain personal data after the system has been powered off and the hard drive has been removed.

HP Business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, assuming that no subsequent modifications have been made to the system and assuming that no applications, features, or functionality have been added to or installed on the system.

Following system shutdown and removal of all power sources from an HP Business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and will also remain in nonvolatile memory. Use the steps below to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



**NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

### Current BIOS steps

1. Follow steps (a) through (l) below to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
  - a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults.  
The computer will reboot.
  - c. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults.  
The computer will reboot.
  - e. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.



## Nonvolatile memory usage

Nonvolatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write-protected?
HP Sure Start flash (select models only)	8 MBytes	No	Yes	Provides protected backup of critical System BIOS code, EC firmware, and critical computer configuration data for select platforms that support HP Sure Start.  For more information, see <a href="#">Using HP Sure Start (select models only) on page 129</a> .	Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller.	This memory is protected by the HP Sure Start Embedded Controller.
Real Time Clock (RTC) battery backed-up CMOS configuration memory	256 Bytes	No	Yes	Stores system date and time and noncritical data.	RTC battery backed-up CMOS is programmed using the Computer Setup (BIOS), or changing the Microsoft Windows date & time.	This memory is not write-protected.
Controller (NIC) EEPROM	64 KBytes (not customer accessible)	No	Yes	Stores NIC configuration and NIC firmware.	NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS.	A utility is required to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC non-functional.
DIMM Serial Presence Detect (SPD) configuration data	256 Bytes per memory module, 128 Bytes programmable (not customer accessible)	No	Yes	Stores memory module information.	DIMM SPD is programmed by the memory vendor.	Data cannot be written to this memory when the module is installed in a computer. The specific write-protection method varies by memory vendor.
System BIOS	9 MBytes	Yes	Yes	Stores system BIOS code and computer configuration data.	System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are input using the Computer Setup (BIOS) or a custom utility.	<b>NOTE:</b> Writing data to this ROM in an inappropriate manner can render the computer non-functional.  A utility is required for writing data to this memory and is available on the HP website; go to <a href="http://www.hp.com/support">http://www.hp.com/support</a> . Select <b>Find your</b>

Nonvolatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write-protected?
Intel Management Engine Firmware (present only in select Elite or Z models. For more information, go to <a href="http://www.hp.com/support">http://www.hp.com/support</a> . Select <b>Find your product</b> , and then follow the on-screen instructions.)	1.5 MBytes or 7 MBytes	Yes	Yes	Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store.	Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space.	<b>product</b> , and then follow the on-screen instructions.  The Intel chipset is configured to enforce hardware protection to block all direct read/write access to this area. An Intel utility is required for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility.
Bluetooth flash (select products only)	2 Mbit	No	Yes	Stores Bluetooth configuration and firmware.	Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor.	A utility is required for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade.
802.11 WLAN EEPROM	4 Kbit to 8 Kbit	No	Yes	Stores configuration and calibration data.	802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public.	A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Webcam (select products only)	64 Kbit	No	Yes	Stores webcam configuration and firmware.	Webcam memory is programmed using a utility from the device manufacturer that can be run from Windows.	A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Fingerprint reader (select products only)	512 KByte flash	Yes	Yes	Stores fingerprint templates.	Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager.	Only a digitally signed application can make the call to write to the flash.

# Questions and answers

## 1. How can the BIOS settings be restored (returned to factory settings)?



**IMPORTANT:** Restore defaults does not securely erase any data on your hard drive. See question and answer 6 for steps to securely erase data.

Restore defaults does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Apply Factory Defaults and Exit**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

## 2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It is a replacement for the older BIOS architecture, but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure run-time environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (Touchscreen, TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer’s hardware before loading and executing the OS; the run-time environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

## 3. Where does the UEFI BIOS reside?

The UEFI BIOS resides on a flash memory chip. A utility is required to write to the chip.

## 4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed/timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. This EEPROM cannot be written to when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

## 5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

## 6. How can the BIOS security be reset to factory defaults and data erased?

---

 **IMPORTANT:** Resetting will result in the loss of information.

These steps will not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

---

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

#### 7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, simply disabling Secure Boot will not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure you used to create the Custom Secure Boot Keys, but make the selection to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

## Using HP Sure Start (select models only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

# C Specifications

Item	Value		
<b>Dimensions</b>	<b>Without stand</b>	<b>Adjust Height Stand (at 0 degrees)</b>	<b>Reclining Stand (at 0 degrees)</b>
Width	21.2 in (539.6 mm)	21.2 in (539.6 mm)	21.2 in (539.6 mm)
Depth	2.12 in (53.8 mm)	7.1 in (180.28 mm)	10.3 in (261.8 mm)
Height	13.46 in (341.79 mm)	18.4 in (467.7 mm)	10.63 in (269.98 mm)
<b>Approximate Weight</b>			
With touch panel	13.29 lb (6.03 kg)	19.24 lb (8.73 kg)	21.12 lb (9.58 kg)
Without touch panel	13.51 lb (6.13 kg)– 13.62 lbs (6.18 kg)	19.46 lb (8.83 kg)– 19.68 lbs (8.93 kg)	21.34 lb (9.68 kg) – 21.44 lbs (9.73 kg)
<b>Temperature Range</b>			
Operating		50° to 95°F (10° to 35°C)	
Nonoperating		-22° to 140°F (-30° to 60°C)	
<b>Relative Humidity (non-condensing)</b>			
Operating		10-90% at ambient	
Non-operating		5-95% at ambient	
<b>Maximum Altitude (unpressurized)</b>			
Operating		0 - 10,000 ft (0 - 3,048 m)	
Non-operating		0 - 30,000 ft (0 - 9,144 m)	
<b>Power Supply</b>			
Rated Voltage Range		100-240 V	
Rated Line Frequency		50-60 Hz	
<b>Max Operating Power</b>	180 W (Intel UMA models); 210 W (AMD discrete Gfx models)		

---

# Index

## A

- access panel
  - locked 79
  - removing 21
- adjustable height stand
  - removing 20
- administrator password 119
- antenna
  - removing 59
- audible codes 117
- audio board
  - removing 54
- audio problems 86

## B

- backup and recovery, Windows 7 106
- Backup and Restore 108
- backups
  - creating 108
  - recovering 109
- battery
  - disposal 18
- battery replacement 30
- beep codes 117
- BIOS
  - clearing and resetting 121
- boot order
  - changing 106
- booting options
  - Full Boot 112
  - Quick Boot 112
- bottom components 4

## C

- cable management 18
- cables
  - connecting 61
- cautions
  - AC power 12
  - cables 17
  - electrostatic discharge 12
  - keyboard cleaning 16
  - keyboard keys 16
- CD-ROM or DVD problems 96

- chassis types, illustrated 12
- cleaning
  - computer 16
  - mouse 16
  - safety precautions 15

## CMOS

- backing up 119

## components

- bottom 4
- FHD webcam 3
- front 2
- IR webcam 2
- rear 4
- side 3
- top 2

- computer cleaning 16

## Computer Setup

- access problem 78

## connecting

- cables 61
- power cord 61
- country power cord set requirements 123
- Customer Support 76

## D

- display panel
  - removing 56
- drive
  - 2.5-inch, removing 23
  - optical drive, replacing 24
  - types 23
- Driver Recovery DVD,
  - creating 107
  - using for restore 110

## E

- electronic label 1
- electrostatic discharge (ESD) 12
  - preventing damage 13
- error
  - codes 112, 117
  - messages 112

## F

- F10 Setup
  - access problem 78
- f11 recovery 110
- features
  - overview 1
- FHD webcam components 3
- fingerprint reader
  - removing 33
- flash drive problems 98
- flashing LEDs 117
- front components 2
- front panel problems 99

## G

- general problems 78
- grounding methods 14

## H

- hard disc drive
  - 2.5-inch, removing 23
- hard drive 23
  - proper handling 17
  - replacing 23
  - self-encrypting 23
  - solid state 23
  - types 23
- hard drive cage
  - removing 49
- hard drive problems 83
- hard drive recovery 110
- hardware installation problems 91
- heat sink
  - removing 35
- helpful hints 77
- HP PC Hardware Diagnostics (UEFI)
  - using 74
- HP Recovery Disc Creator, using 107
- HP Recovery Manager
  - correcting boot problems 106
  - starting 105
- HP Recovery media
  - creating 102
  - recovery 105

- HP Recovery partition
  - checking for presence 110
  - recovery 105
  - removing 106
  - using for recovery 110
- HP Sure Start 129
- I**
- installing
  - battery 30
  - optical drive 24
- Internet access problems 100
- IR webcam components 2
- K**
- keyboard
  - cleaning 16
  - illustrated 11
- keyboard problems 89
- L**
- labels
  - Certificate of Authenticity 5
  - electronic 1
  - location 5
  - Microsoft Certificate of Authenticity 5
  - serial number 5
  - service 5
- M**
- M.2 solid-state drive
  - removing 26
- media card reader
  - problems 85
- memory
  - nonvolatile 124
  - problems 95
  - volatile 124
- memory module
  - removing 28
- Microsoft Certificate of Authenticity
  - label 5
- minimized image recovery 105
- minimized image, creating 104
- mouse
  - cleaning 16
  - problems 89
- N**
- network problems 92
- nonvolatile memory 124
- numeric error codes 112
- O**
- opening the computer 19
- operating guidelines 15
- optical drive
  - problems 96
  - replacing 24
- original system recovery 104
- overheating, prevention 15
- P**
- password
  - administrator 119
  - clearing 119
  - power-on 119
- port cover
  - removing 19
- POST error messages 112
- power button board
  - removing 33
- power cord
  - connecting 61
- power cord set requirements
  - country specific 123
- power problems 82
- power supply
  - removing 45
- power-on password 119
- printer problems 88
- problems
  - audio 86
  - CD-ROM or DVD 96
  - Computer Setup 78
  - F10 Setup 78
  - flash drive 98
  - front panel 99
  - general 78
  - hard drive 83
  - hardware installation 91
  - Internet access 100
  - keyboard 89
  - Media Card Reader 85
  - memory 95
  - mouse 89
  - network 92
  - power 82
  - printer 88
  - software 101
- product name and number,
  - computer 5
- R**
- rear components 4
- rear cover
  - illustrated 7
- rear I/O cover
  - illustrated 7
- rear I/O panel
  - removing 48
- rear port cover
  - illustrated 7
  - removing 19
- recline stand
  - removing 20
- recover
  - options 104
- recovery
  - discs 103, 105
  - HP Recovery Manager 104
  - media 105
  - starting 105
  - supported discs 103
  - system 104
  - USB flash drive 105
  - using HP Recovery media 103
- recovery media
  - creating 102
  - creating using HP Recovery Manager 103
- recovery media, creating 107
- recovery media, using for restore 110
- recovery partition 110
  - removing 106
- recovery tools, Windows 109
- recovery, system 108
- removal and replacement procedures
  - access panel 21
  - All-in One chassis 19
  - antenna 59
  - audio board 54
  - display panel 56
  - fingerprint reader 33
  - hard drive cage 49
  - heat sink 35
  - M.2 solid-state drive 26
  - memory 28
  - power button board 33

- power supply 45
- preparing to disassemble the computer 19
- rear I/O cover 47
- rear I/O panel 48
- speakers 55
- system board 50
- thermal module 35
- VESA mounting bracket/fan assembly 43
- webcam module 40
- WLAN module 31
- removing
  - 2.5-inch hard disc drive 23
  - optical drive 24
- removing battery 30
- removing personal data from volatile system memory 124
- resetting
  - CMOS 119
  - password jumper 119
- restoring the hard drive 110
- S**
- safety and comfort 76
- safety precautions
  - cleaning 15
- screws, correct size 17
- security
  - rear port cover, removing 19
- serial number 5
- service considerations 17
- side components 3
- software
  - problems 101
  - servicing computer 17
- speakers
  - removing 55
- specifications
  - computer 130
- stands
  - adjustable height, removing 20
  - attaching and removing 20
  - recline, removing 20
- Startup Repair, using 109
- static electricity 13
- supported discs, recovery 103
- system board
  - removing 50

- system memory, removing personal data from volatile 124
- system recovery 104
- system restore point
  - creating 103
- system restore point, creating 102

## **T**

- temperature control 15
- thermal module
  - removing 35
- tools, servicing 17
- top components 2

## **V**

- ventilation, proper 15
- VESA mounting bracket/fan assembly
  - removing 43

## **W**

- webcam
  - FHD 3
  - Full High Definition 3
  - Infrared 2
  - IR 2
- webcam module
  - removing 40
- Windows
  - system restore point 102, 103
- Windows 10
  - backup and restore 102
- Windows 7
  - backup and recovery 106
- Windows 7 operating system DVD
  - creating 107
  - using for restore 110
- Windows 7 operating system media
  - creating 107
  - using for restore 110
- Windows Startup Repair, using 109
- Windows tools
  - using 103
- WLAN module
  - illustrated 8
  - removing 31